


DESCRIPTION:

Teak Sealer and Protector from Teakdecking Systems allows you to reduce the maintenance of your teak deck for months at a time.

This product is a water-based, polymer infused liquid, when applied to new, restored or freshly cleaned teak, penetrates the wood fibre and forms a protective barrier. This slows down the ageing of the wood and prevents dirt and oxidation (pollutants, spills, etc.). Dirt remains on the surface and can be easily cleaned with the ECO100 and ECO300 range.

Teak sealer & Protector, keeps your teak looking great for months !

Consumption: approximately 25m² for a 0.9L can and 100m² for a 3.78L can.

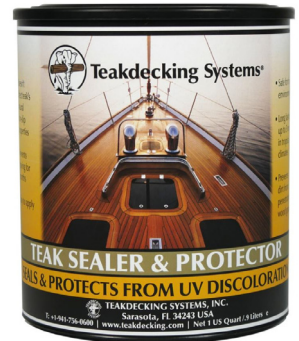

ITS ADVANTAGES:

- Doesn't affect the natural anti-slip properties of teak and reduces wear and tear
- Colourless: does not alter the original colour of the teak
- Prevents oxidation (greying) for months
- Easy to apply (wide brush)
- Helps prevent mildew on new teak
- Environmentally friendly
- Doesn't damage the caulking
- Long lasting effect, over 3 months in tropical climates
- Prevents dirt from penetrating the wood
- No oils, urethanes or varnishes
- No sticky effect
- Minimum shelf life of 24 months
- Available in 0.9 litre or 3.78 litres

INSTRUCTIONS:

Clean the deck of any dirt or oil. Rinse the deck thoroughly and allow to air dry.

Allow your deck to dry thoroughly before applying.

Note: the product will trap moisture if applied before it dries, which may cause mildew.

Temperature should be between 10°C and 35°C. Do not apply in direct sunlight. It is recommended to apply the product before 10am or after 4pm.

Reapply every 4 months.

APPLICATION:

- 1) Apply the product with a wide brush or a lint-free roller depending on your surface.
- 2) Apply in the direction of the teak grain, applying pressure on the first coat to help the product penetrate the teak. Pull the material through.
- 3) Two coats are required. Wait at least 2 hours before applying the second coat. The first coat must be dry to the touch and non-sticky. The second coat should be applied promptly before the deck accumulates dust and dirt.

Note: It is recommended to apply an additional coat of sealer at the first signs of wear. If in doubt, it is always best to add a coat of sealer after a period of time, especially in high traffic and/or exposed areas. Teak will only accept as much sealer as is necessary for protection.

IMPORTANT: Do not attempt to apply sealer to oiled decks without first testing a small area to ensure that it penetrates the wood and does not remain on the surface. If oil is still present, sand or clean several times with ECO100 before applying. This product must be able to penetrate the surface of the teak for optimum effectiveness.

MAINTENANCE:

As the sealer prevents dirt from penetrating the grain, regular proper cleaning should be done with a neutral boat soap or ECO300. In case of heavier dirt/pollution accumulation, use TDS ECO100 cleaner. Always brush perpendicular to the teak grain to protect the soft wood fibres. For regular maintenance (deck washing) use ECO300.

PRECAUTION:

Causes eye irritation. May cause respiratory tract irritation. May cause harm to fertility or the unborn child. Avoid breathing vapours. Wash hands thoroughly after handling. Use only outdoors or in a well-ventilated area. Wear protective gloves/clothing and eye protection. In case of contact with eyes, rinse thoroughly with water. Remove contact lenses, continue rinsing. Consult a medical specialist if necessary.

GUARANTEE:

As part of the sale of this product, TDS doesn't offer any warranty for damage due to misuse. TDS will refund the purchase price of any defective equipment.